SONY

ICF-480S

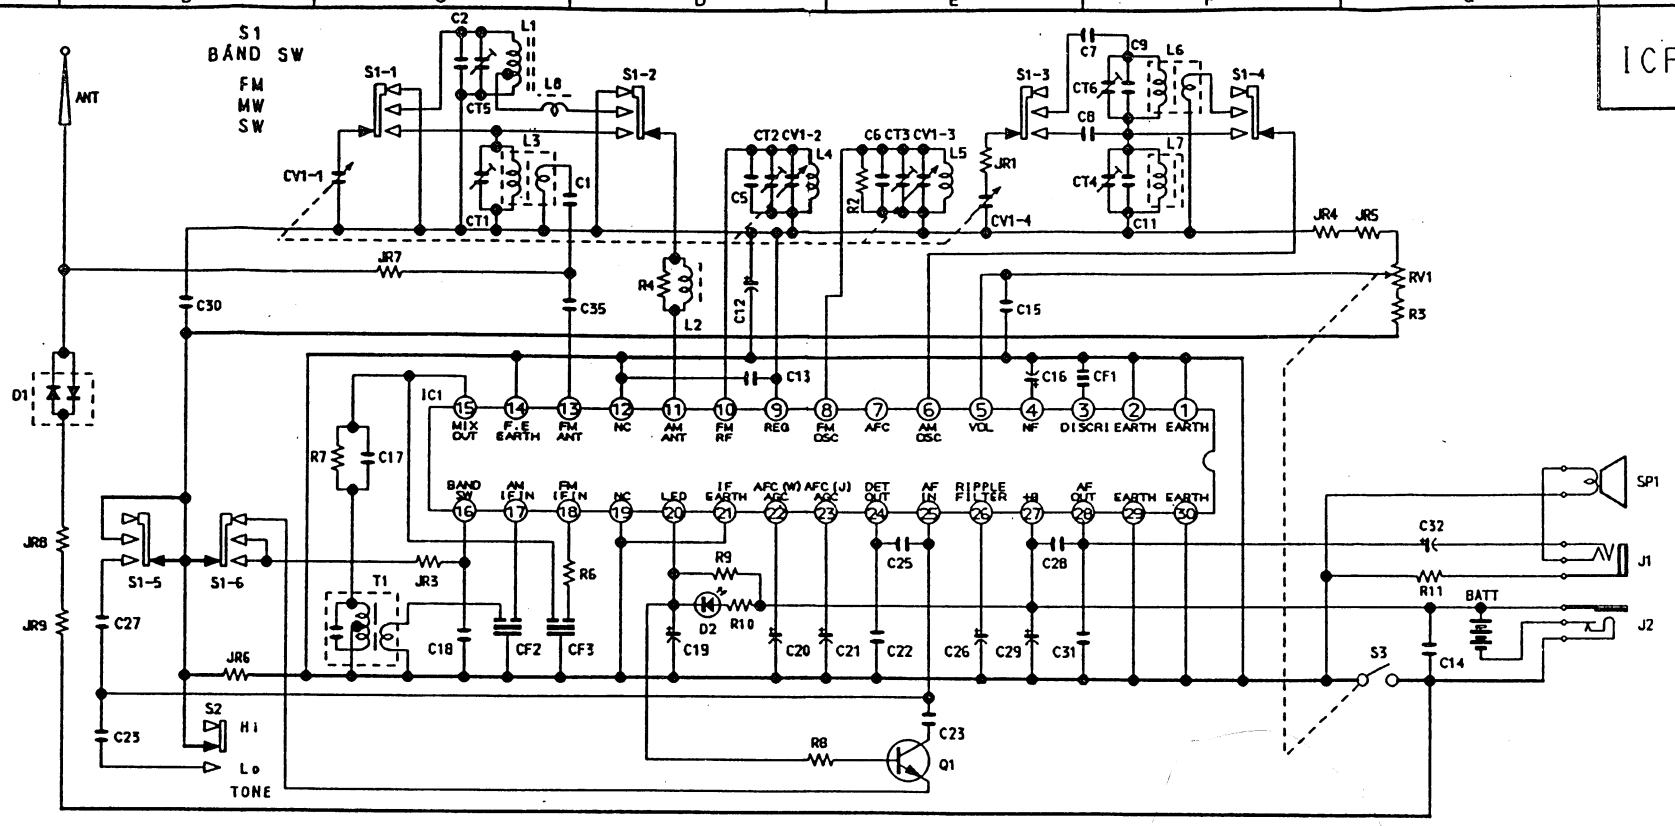

C	1	2125	470PF SL	C	21	CAP. ELECT	10µF/16V	R	1	DELETED		JR	1	3216	0 Ω 1/ 8W	L	1	MW BAR ANT	RV 1	RES. VAR 50KΩ C
	2	2125	8PF SL		22	2125	0.022µF B		2	2125	3.3KΩ 1/10W		2	DELETED			2	INDUCTOR, MICRO 1µH		
	3	DELETED			23	2125	0.047µF F		3	2125	6.8KΩ 1/10W		3	3216	0 Ω 1/10W		3	COIL SW ANT		
	4	DELETED			24	2125	0.033µF F		4	2125	4.7KΩ 1/10W		4	3216	0 Ω 1/10W		4	COIL FM RF aircore	S	1 SWITCH, BAND SELECT
	5	2125	6PF SL		25	3216	1µF F		5	DELETED			5	3216	0 Ω 1/ 8W		5	COIL FM OSC aircore		2 SWITCH, TONE
	6	2125	10PF TH		26	CAP. ELECT	33µF/10v		6	2125	330Ω 1/10W		6	3216	0 Ω 1/ 8W		6	COIL MW OSC		3 SWITCH, POWER (RV1)
	7	STYROL	390PF		27	3216	0.022µF F		7	2125	2.2KΩ 1/10W		7	2125	0 Ω 1/ 8W		7	COIL SW OSC		
	8	STYROL	3900PF		28	2125	0.1µF B		8	2125	22KΩ 1/10W		8	3216	0 Ω 1/ 8W		8	INDUCTOR, CHIP 27µH		
	9	CAP. CERA	18PF VK		29	CAP. ELECT	470µF/6.3V		9	2125	4.7KΩ 1/10W		9	2125	0 Ω 1/ 8W				J	1 JACK EARPHONE
	10	DELETED			30	3216	0.001µF F		10	2125	1KΩ 1/10W									2 JACK EXT DC
	11	CAP. CERA	15PF VK		31	2125	0.1µF B		11	3216	47Ω 1/ 8W					IC	1	CXA1019S		
	12	CAP. ELECT	10µF/16V		32	CAP. ELECT	330µF/6.3v					CV	1	CAP. VAR TUNING						
	13	2125	0.01µF F		33	DELETED													SP	1 SPEAKER 4Ω
	14	2125	0.022µF F		34	DELETED		CF	1	FM DISCRI		CT	1	CAP. TRIMMER (CV1)		Q	1	2SC2412		
	15	2125	0.01µF F		35	CAP. CERA	15PF SL		2	MW IF			2	CAP. TRIMMER (CV1)					ANT	ANT. TELESCOPIC
	16	CAP. ELECT	10µF/16V						3	FM IF			3	CAP. TRIMMER (CV1)						
	17	2125	100PF SL										4	CAP. TRIMMER (CV1)		D	1	1SS123	BATT	R6, SIZE AAX3
	18	2125	0.01µF F										5	CAP. TRIMMER			2	LED TUNING TLR124		
	19	CAP. ELECT	4.7µF/25V					T	1	AM IFT			6	CAP. TRIMMER						
	20	CAP. ELECT	1µF/50v																	

SCHEMATIC DIAGRAMS